



- IMX226 CMOS sensor
- ALVIUM image processing
- MIPI CSI-2 interface
- Various hardware options

Model without hardware options

Alvium 1800 C – High-performance camera modules for embedded vision

Machine vision sensors for embedded system developers

Alvium 1800 C-1240 with Sony IMX226 runs 41.0 frames per second at 12.2 MP resolution.

The powerful Alvium 1800 C MIPI CSI-2 camera series gives embedded system developers access to Sony's high-performance image sensors popular in the machine vision industry. These sensors with resolutions up to 20 megapixels deliver excellent image quality and up to twice the frame rates compared to similar Alvium 1500 C models.

To operate Alvium CSI-2 cameras on your vision system, Allied Vision provides different access modes: - **GenICam for CSI-2 Access** controls the camera by GenICam features, using the Alvium CSI-2 driver and CSI-2 transport layer (TL) directly. Currently, Alvium 1800 C-500, C-507, C-511, C-1236, and C-2050 are supported. Please find FAQs and installation instructions in the [Getting Started with GenICam for CSI-2](#) application note. - **Direct Register Access (DRA)** to control the cameras via registers for advanced users. - **Video4Linux2 Access** allows to control the cameras via established V4L2 API and applications like GStreamer and OpenCV. Open-source CSI-2 drivers are available on [GitHub](#) for different boards and system on chips (SoCs).

See [Customization and OEM Solutions webpage](#) for Alvium Cameras Hardware Options.

Specifications

Interface	MIPI CSI-2, up to 4 lanes
Resolution	4024 (H) × 3036 (V)
Spectral range	300 to 1100 nm
Sensor	Sony IMX226
Sensor type	CMOS
Shutter mode	Rolling shutter
Sensor size	Type 1/1.7
Pixel size	1.85 μm × 1.85 μm
Lens mounts (available)	C-Mount
Max. frame rate at full resolution	41 fps using 4 lanes, RAW8 (GREY)
ADC	10 Bit
Image buffer (RAM)	256 KByte
Non-volatile memory (Flash)	1024 KByte

Imaging performance

Imaging performance data is based on the evaluation methods in the EMVA 1288 Release 3.1 standard for characterization of image sensors and cameras. Measurements are typical values for monochrome models measured without optical filter.

Quantum efficiency at 529 nm	74 %
Temporal dark noise	4.8 e ⁻
Saturation capacity	10500 e ⁻
Dynamic range	65 dB
Absolute sensitivity threshold	6.3 e ⁻

Output

Bit depth	10-bit Bit
YUV color pixel formats	YUV422 8-bit (UYVY) [MIPI CSI-2 (FOURCC)]
RGB color pixel formats	RBG888 (RGB3) [MIPI CSI-2 (FOURCC)]
Raw pixel formats	RAW8 (GREY), RAW10 (Y10) [MIPI CSI-2 (FOURCC)]

General purpose inputs/outputs (GPIOs)

TTL I/Os 2 programmable GPIOs

Operating conditions/dimensions

Operating temperature -20 °C to +65 °C (housing)

Power requirements (DC) 5 VDC over MIPI CSI-2


Power consumption Typical: 2.9 W

Mass 40 g

Body dimensions (L × W × H in mm) 26 × 29 × 29

Regulations 2011/65/EU, including amendment 2015/863/EU (RoHS)

Quantum efficiency

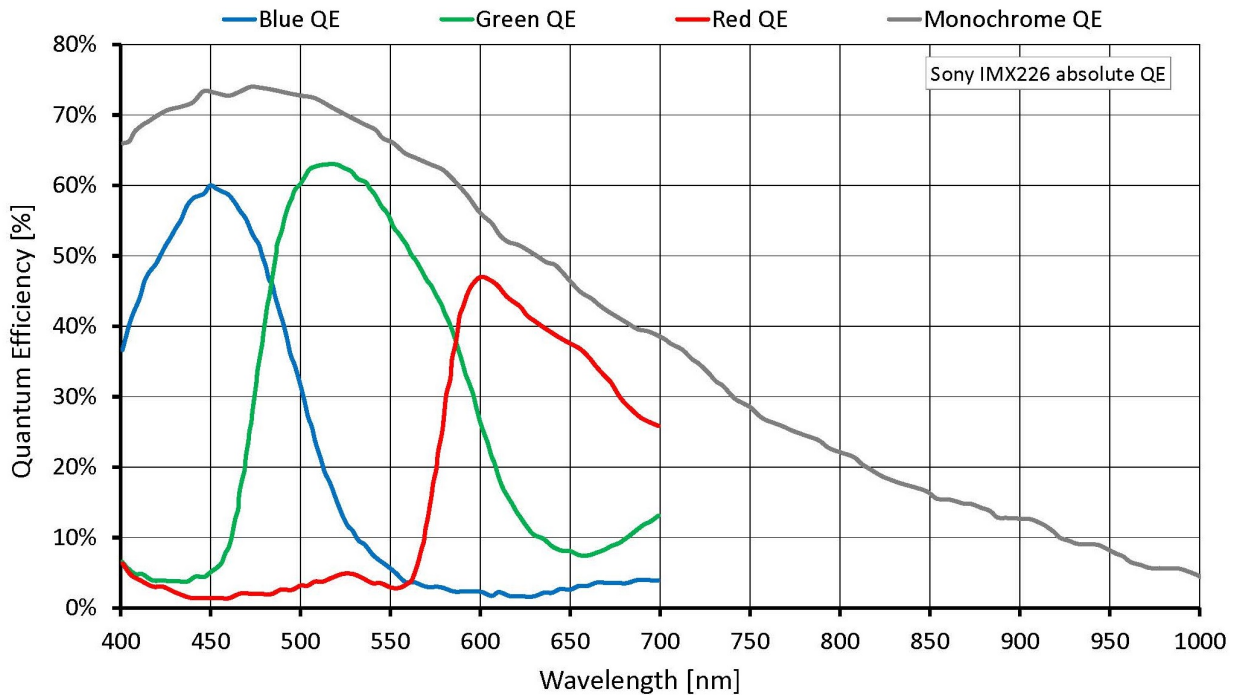

Features

Image control: Auto

- Auto exposure
- Auto gain
- Auto white balance (color models)

Image control: Other

- Black level
- Color transformation (incl. hue, saturation; color models)
- De-Bayering up to 5×5 (color models)
- DPC (defect pixel correction)
- FPNC (fixed pattern noise correction)
- Gamma
- Reverse X/Y
- ROI (region of interest)

Camera control

- Acquisition frame rate
- Firmware update in the field
- I/O and trigger control
- Temperature monitoring

Technical drawing

